

Рукавные фильтры КВФ-М

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93



KBF-M

Multi-bag-filter

PN	4–16
DN	65–300
ANSI	3–12"

Example:
8-fold bag filter
KMF-M8 with
quick-release
fastener

Application areas

The KBF filter is used for the filtration of liquid media in industrial applications. Alternatively, the filter can be fitted with bags or a strainer insert. The filters are not approved for gases.

Brief description and function

KBF series bag filters are available in 1.4301 (SS304) and 1.4401/1.4408 (SS316) stainless versions. The filter consists of a filter vessel, foot frame, strainer support, down-holding device and, optionally, the filter bag.

The medium enters the filter vessel through the side inlet and flows through a filter bag that is reinforced by a strainer support, from the inside to the outside. In addition to the recess and the down-holding device, the strainer support ensures that the filter bag is properly seated (Pict. 1).

Notice:

The compatibility between medium and vessel or sealing material is the responsibility of the operator.

The design of the pressure vessel is based on a quasi-static operation (load cycle number ≤ 1000 according to AD 2000 Merkblatt S1, section 1.4). Max. Differential pressure inlet - outlet 2 bar.

Installation

The filter is installed in pipes by flange connections. Ensure that the filter is installed in a mechanically stress-free manner without additional loads. The medium to be filtered must enter the filter vessel through the upper flange. Incorrect installation can cause filter malfunctions and damage the filter cartridge.

Attention: Since this is a pressure vessel, make absolutely sure that the filter is depressurized before starting maintenance tasks. Comply with the safety and accident prevention guidelines required for the medium.

Commissioning/operating instructions

1. Slowly open the inlet/outlet valves.
2. Slowly open* the venting device in the cover until liquid escapes (in case of hazardous liquids, according to the data sheet for hazardous substances and only using protective equipment or additional vent lines).
3. Replace the filter bag.
4. Close the venting device.
5. Filter is ready for operation.

Cleaning (quick guide)

Attention: Since this is a pressure vessel, make absolutely sure that the vessel is depressurized before starting maintenance tasks. Comply with the safety and accident prevention guidelines required for the medium.

1. Depressurize the filter by using the venting or draining device (Pict. 2) (See filter documentation).
2. Loosen the vessel cover bolting or quick opening device and remove the cover.*
3. Drain the filter by using the draining device until the fill level is at least just below strainer support.
4. Pull out the strainer insert with the filter bag upwards off the filter vessel. Replace the filter bag.
5. When re-assembling the parts, make sure that the sealing elements are intact; they must be replaced if necessary.
6. In case the medium or operating conditions are changed, a conformity assessment according to PED EN 2014/68/EU must be carried out.

* For quick-release fasteners, observe the operating instructions supplied.


Technical data

Technical data		
	Standard version	Special versions or optional extras
Filter insert	Filter bag with strainer support	Cleanable strainer insert with stainless steel mesh
Filter mesh	All off-the-shelf bags 0.8–2,000 µm	Strainer insert 5–2,000 µm
Filter cap	Cover with eye bolts	Quick-release fastener
Venting device	Screw/plug	Ball valve
Draining device	Screw/plug	Ball valve
Connection	Threaded sockets	Flange reducer, welded-on flange
Materials		
Housing and cover	1.4301/SS304/A2	1.4401/SS316/A4
Strainer support	1.4301/SS304/A2	1.4401/SS316/A4
Down-holding device	1.4301/SS304/A2	1.4401/SS316/A4
Cover seal	O-Ring: NBR	FPM, EPDM, PTFE
Eye bolt	1.4301/SS304/A2	–
Ring nut	1.4301/SS304/A2	–
Venting device	1.4301/SS304/A2	1.4401/SS316/A4
Draining device	1.4301/SS304/A2	1.4401/SS316/A4
Differential pressure display/cleaning display	Connections available	Visual, electrical
Surface interior		
Steel housing	Glass bead blasted	Electropolished
Surface exterior		
Steel housing	Glass bead blasted	Electropolished


Accessories

We produce and deliver additional design and material variants on request.
We solicit your request.


Technical data and dimensions

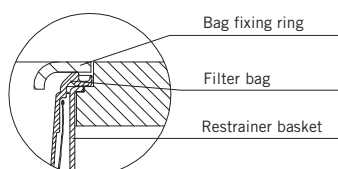

Pict. 1

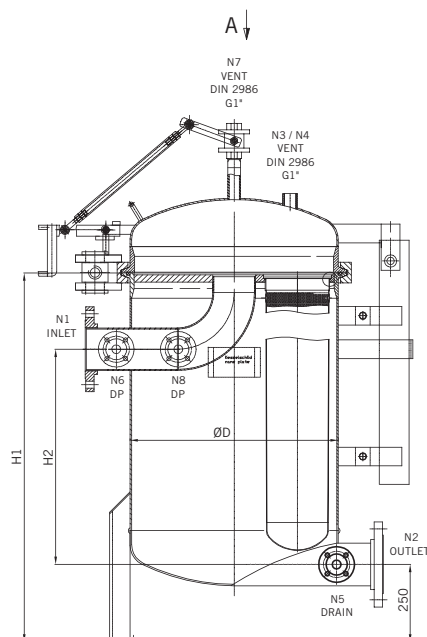


Pict. 2

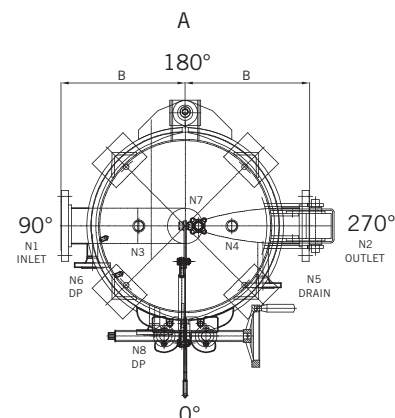

Pict. 3

KRÖNEFILTER SOLUTIONS IN FILTRATION	
Bau Nr.: comp. no.:	
Typ: type:	KBF
min./max. zul. Druck (PS): min./max. pressure (PS):	10 bar
Prüfdruck: test pressure:	13 bar
min./max. zul. Temperatur (TS): min./max. temperature (TS):	0 60 °C
Volumen: volume:	L
Baujahr: year of construction:	2017
Krone Filter Solutions GmbH Industriestraße 19 29876 Oyten (Germany) Tel: +49 (0) 4207 98 769-0 Fax: +49 (0) 4207 98 769-27 www.krone-filter.com	

Pict. 4: Type plate example

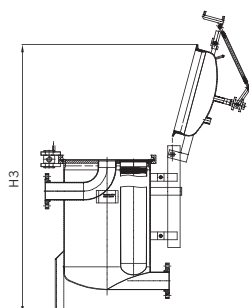

Pict. 5


Modell	Flow rate	N1/N2	N3/N4/N7	N5	N6/N8	ØD	H1	H2	H3	B
	(m ³ /HF)	Inlet/Outlet	Venting	Draining	DP (Differential pressure)	mm	mm	mm	mm	mm
KBF-M3	120	DN 80 EN 1092-1 11 PN 6-16/ 3" ANSI B 16.5 Class 150# RF *	G1" - DIN2986	DN 25 PN 16 - DIN EN 1092-1/11B		458	920	500	1.670	350
KBF-M4	160	DN 100 EN 1092-1 11 PN 6-16/ 4" ANSI B 16.5 Class 150# RF *	G1" - DIN2986	DN 25 PN 16 - DIN EN 1092-1/11B		558	926	508	1.780	400
KBF-M5	200	DN 125 EN 1092-1 11 PN 6-16/ 5" ANSI B 16.5 Class 150# RF *	G1" - DIN2986	DN 25 PN 16 - DIN EN 1092-1/11B		608	930	508	1.830	425
KBF-M6	240	DN 150 EN 1092-1 11 PN 6-16/ 6" ANSI B 16.5 Class 150# RF *	G1" - DIN2986	DN 25 PN 16 - DIN EN 1092-1/11B		658	935	508	1.890	450
KBF-M8	320	DN 200 EN 1092-1 11 PN 6-16/ 8" ANSI B 16.5 Class 150# RF *	G1" - DIN2986	DN 25 PN 16 - DIN EN 1092-1/11B		760	1.016	482	2.050	500
KBF-M10	400	DN 250 EN 1092-1 11 PN 6-16/ 10" ANSI B 16.5 Class 150# RF *	G1" - DIN2986	DN 25 PN 16 - DIN EN 1092-1/11B		912	1.102	483	2.300	575
KBF-M12	480	DN 300 EN 1092-1 11 PN 6-16/ 12" ANSI B 16.5 Class 150# RF *	G1" - DIN2986	DN 25 PN 16 - DIN EN 1092-1/11B		962	1.102	483	2.350	620

* other flange standards possible

KBF-M Multi-bag filter



Pict. 6

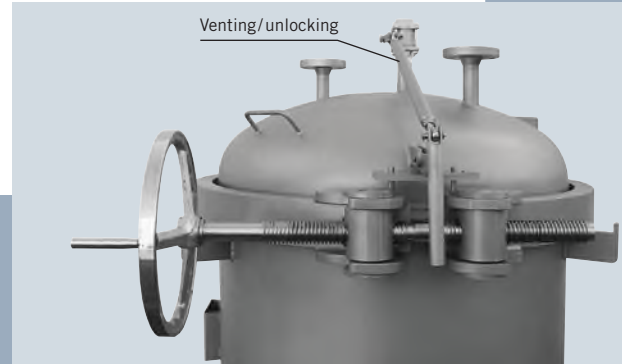

Pict. 7



Pict. 8



Pict. 9

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93